

PocketBook

PocketBook 360 Plus User Manual

Welcome to PocketBook

Thank you for purchasing PocketBook 360 Plus. With your new PocketBook device, you will be able to have the best reading experience anywhere, at any time.

We are one of the largest global manufacturers of e-readers based on E Ink technology, with headquarters in Lugano, Switzerland. Founded in 2007, PocketBook sells its products in more than 40 countries worldwide. Creating high-quality hardware, ergonomic product design, and unique software solutions.

From Bryan Crumpler, CEO and Co-Founder

What's in the Box

Compulsory

- PocketBook 360
- Protective cover
- USB-cable
- User Manual
- Warranty sheet

Optional

- Wrist lash
- Wall charger
- MicroSD Memory Card
- Leather pouch

Specification

Display	5" E Ink® Vizplex 600x800, 166 dpi, B&W
CPU	Samsung® S3C2440 AL-40 400MHz
Operating System	Linux 2.6
Battery	Li-Polymer (1000 mAh) 7000 cpages without charging
Memory	Operativ 64Mb Fixed 512Mb (470 Mb user accessible)
Communications	Mini USB (v 2.0)
Memory Slot	MicroSD, MicroSDHC card
Power Supply	Input: 100-240V ~ 50/60Hz, 0.2A Output: 5V, 1A
Book Formats	Fb2, FB2.zip, TXT, PDF, RTF, HTML, PRC, CHM, DJVU, DOC, EPUB, TCR
Image Formats	JPEG, BMP, PNG, TIFF
Size	With the protective cover: 4.7" x 7.4" x 0.3"(118 x 188 x 8.5 mm) Without the cover: 4.7" x 5.5" x 0.3" (118 x 140 x 10 mm)
Weight`	With the protective cover: 6.3 ounces Without the cover: 5.1 ounces
Color	Black, Ivory

Safety Rules

Attention!

Display has a **glass base**. If a crack appears on the display, be careful, avoid cuts! Do not use the device if damaged! Turn to the service center for repair. **Keep away from children.**

Do Not!

Do not expose this device to the direct sun rays, very high or very low temperature. Device working temperature is between 0° C and 40°C (32°F to 110°F).

Do not store the device in the places with the high humidity. Exposure to moisture can lead to damage of electronic parts and battery. In case of liquid exposure, turn off the device immediately and take out the battery! Take the device to the service center.

Do not put the device on rough or unsteady surface, it may fall. In case of device damage, apply to the service centre.

Do not press the display surface. Protect the display from things which can damage or scratch it.

Do not place the device in dusty or dirty surroundings.


Do not use different chemical solvents for display or case cleaning. Use a soft cloth to remove dust from the device surface. To remove dirt from the device, you also can use a few drops of distilled water.

Do not disassemble the device without qualified assistance.

Do not use a damaged battery, damaged charger, or damaged SD-card. If the battery is damaged replace it immediately.

Do not place the device near strong magnetic fields.

Product Description

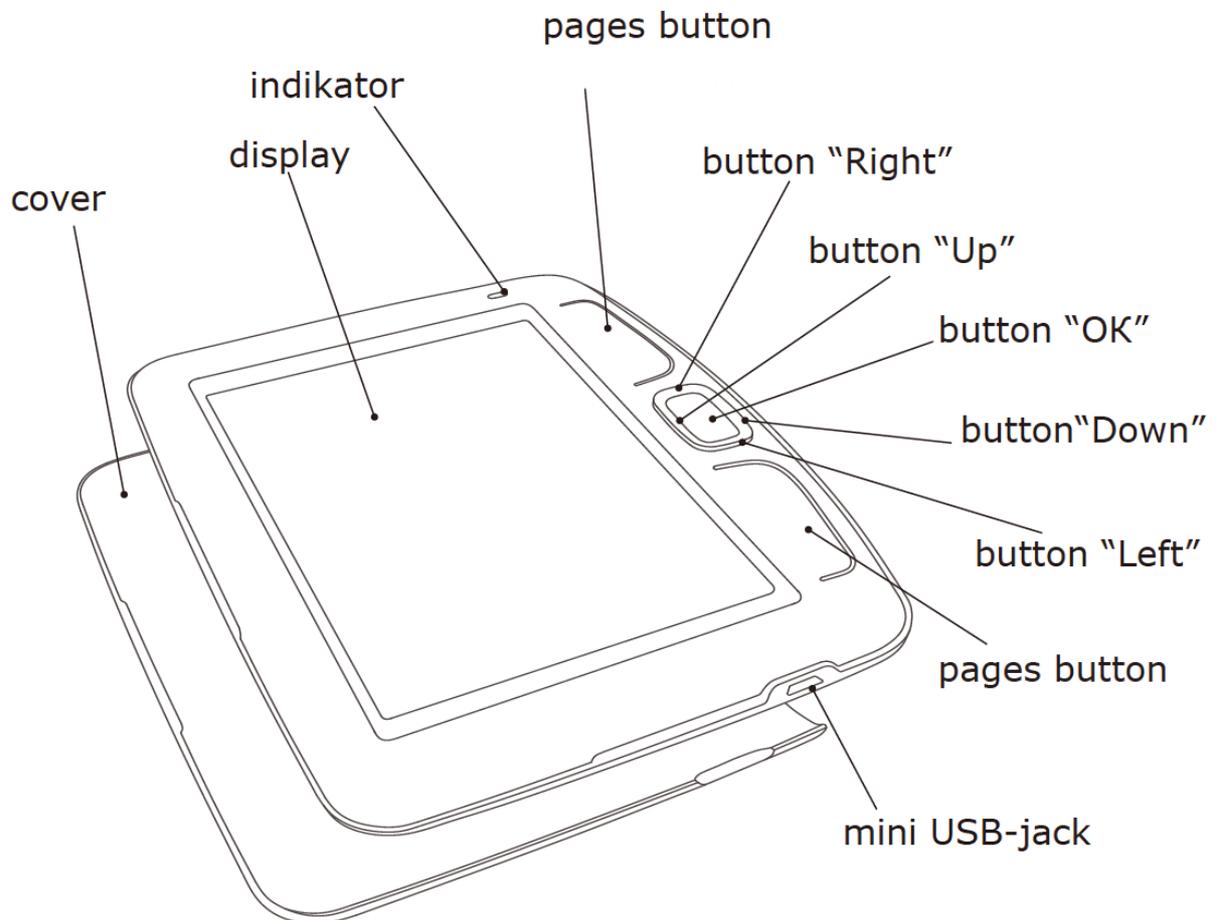

Indicator (Indikator)

Green light – the device is in action

Red or **Orange light** – the battery is charging

No light – the device is fully charged

Mini USB Jack

For connecting to computer or charger.

Buttons

Up, Down, Left, Right – control buttons allow to navigate throughout menu and other objects.

OK – confirms your choice or calls quick access menu.

On/OFF – *long pressure* switches the device on/off, *short pressure* calls the list of ten last books.

Rest – pressing will reload the device.

Pages – turns pages to next/previous page in reading mode, *long pressure* of the lower button performs exit from a book or return to the previous menu.

G-Sensor


The G-sensor (accelerometer) is built in the device, allowing automatically determine the position of the device and rotate display text accordingly. You may use the device in any of four display positions.

The G-sensor may be disabled in the settings menu, having set the display position manually, or in the context menu while reading.

Since using the G-sensor leads to accelerated battery consumption, it is recommended to turn the device off after use or lock the buttons.

Pre-Starting Procedure

TIP In order to prolong battery lifetime, the first charge should last for at least 8-10 hours.

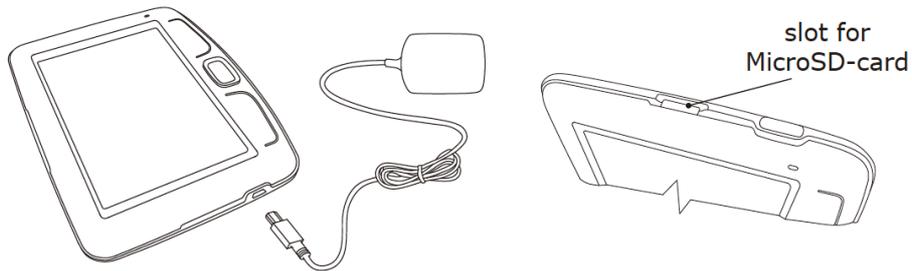


1. Charge the PocketBook by connecting the USB-cable to the computer or charging device.
2. Insert SD-card into the slot for Micro SD-card, which is in the backside of the device.
3. To turn on the device, hold button "On/Off" for one second.

E-Book Reading

This device allows you to read books in FB2, FB2.zip, TXT, PDF, RTF, HTML, PRC, CHM, DJVU, DOC, EPUB, and TCR formats.

Storing Books

TIP Do not disconnect the device from the computer before file copying has been completed, it can result in information loss. Before unplugging the USB-cable or turning the computer off it is recommended to execute «device safe extraction».

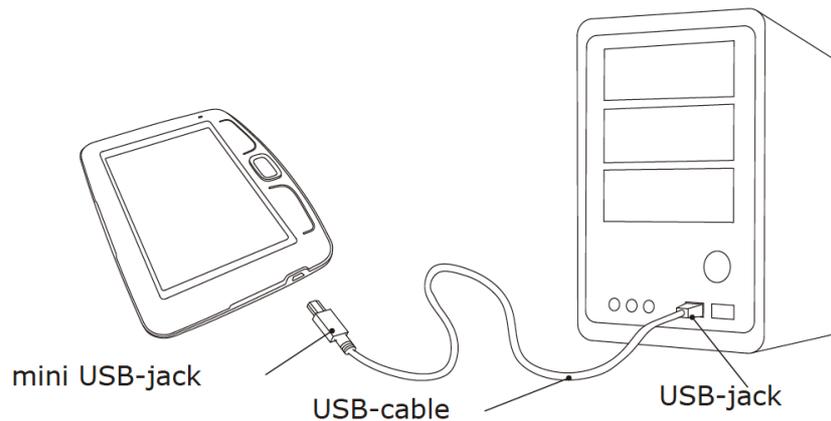

1. Connect the device to the computer using a USB-cable.
2. The internal memory of the device and the Micro SD-card will appear in the computer as two new disks.
3. Copy books to the necessary folder in the memory of the device or SD-card using Windows Explorer or another file browser.

Contact Information

If you have problems with your PocketBook, try using PocketBook Support website, or our Customer Service members will be happy to help you.

PocketBook Support Web Address

<https://www.pocketbook-int.com/us/support>

PocketBook Support E-mail Address

help@pocketbook-int.com

For other inquiries, please contact our general services.

PocketBook General Web Address

www.PocketBookReader.com

PocketBook General E-mail Address

info@pocketBookreader.com

PocketBook General Phone Number

(914) 374-5067

PocketBook General Mail Ddress

Brain Plaza International, LLC
Dba PocketBookReader
202 Admiralty Loop
Staten Island NY
10309